

205TMW Telephone User Guide



SCITEC[®]

1212 E. University Ave. | Urbana, IL 61802
Phone 217-384-6041 | Fax 217-384-6501
info@scitecinc.com | www.scitecinc.com

Unpacking your phone

This package should contain the following:

- Telephone base unit
- Telephone handset unit
- Coiled handset cord
- Straight line cord
- 5 inch straight line cord

Installation

The 205TMW telephone is designed for use behind a registered PBX system. The telephone user or system installer must supply an RJ-11 modular wall jack to connect this telephone to the PBX system. The PBX "station port" type must be "Industry Standard Analog" or "POTS." This telephone cannot be used with "digital" PBX station ports.

Insert one end of the coiled handset cord into the jack on the BOTTOM END of the base unit. Insert the other end of the cord into the jack on the BOTTOM END of the handset. The handset of the unit should now be placed into the base of the unit. Connect the straight line cord from the wall jack to the line jack located underneath the base unit.

Lift the handset. A dial tone should be heard in the receiver.

Conversion to wall mount

Connect the base unit to the handset as instructed above. Connect the 5 inch straight line cord from the wall jack to the line jack located underneath the base unit. Align the slotted holes on the back of the telephone over the mounting studs on the wall jack. Pull down on the telephone until the studs are locked in place.

Explanation of Controls

Ringer Volume – Adjusts ringer volume to LOW or HI. Located on the left side of the phone near the dataport.

Hearing-aid Compatible Handset

Handset Jack – Modular jack to connect coiled handset cord from handset to base unit.

VOL switch – Volume control switch on the handset steps through the three available handset volume levels [Normal – Medium – High].

Visual ringing indicator – Indicates phone is ringing or a message is waiting. Responds to NEON/90V message waiting light format.

Using the 205TMW telephone:

To place a call: Lift the handset, then dial the number desired.

To answer a call: Lift the handset.

Adjusting Handset Volume

Press the [VOL] key. Each press of [VOL] moves to the next of three possible settings of [Low – Medium – High], and repeats back to Low volume on the fourth press. Adjust as desired.

Adjusting Ringer Volume

The ringer volume control switch is located on the left side of the telephone. There are two ringer volume settings, high and low. Adjust as desired.